

## **REYCO Oil Miser® Operator Instructions**

To activate system operation, first turn the switch marked “SYSTEM” to the **START** position and release. Follow the same procedure to activate “PUMP” and “CONVEYOR” if these options were supplied. Green lights on the control panel face will indicate status of each component.

To stop system operation, turn the “SYSTEM” switch to the **OFF** position. This will stop all systems’ operations.

Discharge rotary valves may be stopped by turning disconnect switch mounted on the valves to the **OFF** position. This will stop all systems’ operations. To restart, turn disconnect switches to the **ON** position, then follow system start procedures at main control panel.

In case of emergency, push “Emergency Stop” button at the main control panel or turn disconnect switch at discharge rotary valves to **OFF** position, whichever is closer. This will stop all systems’ operations.

**CAUTION:** THIS MACHINE HAS MOVING PARTS THAT CAN CAUSE SERIOUS INJURY. BEFORE OPERATING OR PERFORMING MAINTENANCE, THE FOLLOWING PRECAUTIONS MUST BE TAKEN:

1. MAKE SURE ALL MOVING PARTS ARE SHIELDED FROM PERSONNEL.
2. READ ALL INSTALLATION, MAINTENANCE AND OPERATING INSTRUCTIONS.
3. DO NOT OPERATE SYSTEM UNDER CONDITIONS OTHER THAN THOSE FOR WHICH THE SYSTEM WAS PURCHASED.

A FAILURE TO TAKE THESE PRECAUTIONS COULD RESULT IN SERIOUS BODILY INJURY AND PROPERTY DAMAGE.